
Bamboo X-treme® Decking Chevron

installation instructions

Woca

Private Residence Casablanca decking installed in a chevron pattern - Casablanca, Morocco

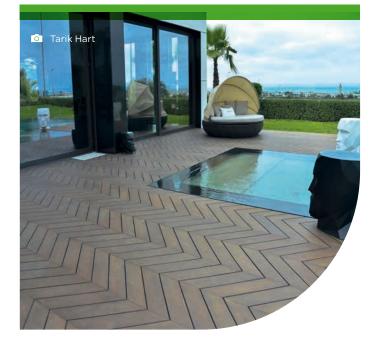



MOSO[®] Bamboo X-treme[®] Outdoor Decking Chevron installation instructions

before installation


- Waterlogging under the decking must be avoided by preparing a water permeable ground structure. This can be achieved by sand lavers and gravel dispersion above.
- Use cement/stone tiles 40-50 mm thick or pedestals, to support the sub frame. Make sure that the supports are no more than 600 mm apart. Always ensure joist connections are installed with the ends resting on supports (see drawing).
- Place a root barrier under the tiles and pedestals to prevent weeds growing under the decking.
- Install the decking boards with a slope of 1-2% to enable water to run off the surface. Alternatively, the decking can be installed without a slope, but due to the fact that water stays on the surface longer, it is possible more superficial cracks will develop. If the installation is done without a slope, more cleaning will be required.
- Ensure good ventilation of the decking by keeping at least 20 mm gap from walls and objects and avoid closing the decking at the sides. The gap between the boards must be open to ensure unrestricted ventilation.
- When the surface / soil underneath the decking is not fast drying, there should be at least 100 mm distance between the decking and the surface underneath.
- Use sub frame joists with the minimum size of 40x60 mm. MOSO* recommends the use of MOSO* Bamboo X-treme* Sub frame joists, which are specifically produced for use in combination with our decking products.

Alternatively, suitable joists are those with the same durability class as the decking; aluminum sub frame joists, stable hardwood joists or pine joists. When using hardwood or pine as joists, make sure the moisture content of these joists is below 12%. Avoid direct contact with the soil.

- MOSO[®] sub frame joists can be installed without gaps, connecting the joists with screws and glue suited for outdoor use. Other sub frame joists should be installed according to the instructions of the supplier.
- In order to create a stable deck frame, the outsides of the frame have to be connected at regular intervals to the ground / structure below. Alternatively cross bracing can be applied.
- For Chevron pattern decking, it is important to consider the desired positioning of the pattern before constructing the deck frame, this way joist placement is determined with exact decking board alignment in mind.
- Install the boards on sub frame joists with 400 mm space between the parallel joists (centreto-centre), so each board is supported by 2 joists. The outer joists should be spaced in such way that the board ends line up perfectly with the edge of the joist (see detail A).
- It is important that the joists are kept accurately parallel to each other to ensure that the decking board ends will correctly line up with the joist centrelines.
- The ends of the parallel joists should be closed off by attaching perpendicular joists (rim joists) to the ends of the parallel joists, thereby creating a deck frame that is closed on all sides. These perpendicular joists provide the additional surface area needed to secure the ends of the cut-to-size Chevron board sections around the deck perimeter.

please note

- The MOSO[®] Bamboo X-treme[®] Outdoor Decking Board is a natural product, some variation in colour, grain and appearance is normal. Colour can change fast from dark brown to brown or grey, depending on the climatic conditions and maintenance schedule.
- Small cracks and splinters on the surface and on the end of the boards can arise from the different drying characteristics of the surface and cross cut ends. The surface will also get rougher over time. This phenomenon is normal for most wood species and is minimised for this product by its unique 'Thermo-Density*' production method. Cracks on the board ends can be further minimised by applying sealer to the ends of the boards (see 'the installation').
- Splinters and roughness can be removed by cleaning the surface of the decking with the silicon carbide broom or machine disk which MOSO* supplies. The surface will become smoother and splinters are removed.
- Dimensional changes or cupping of the boards can occur after installation. This phenomenon is normal for most wood species and is minimized for this product by its unique Thermo-Density* production process.
- When using the flat side of the boards as top surface please note that deformation under influence of climate may be more visible.
 Some deformation and/or cupping of the material can occur. This phenomenon is normal for outdoor exposed wood and cannot be grounds for a claim.

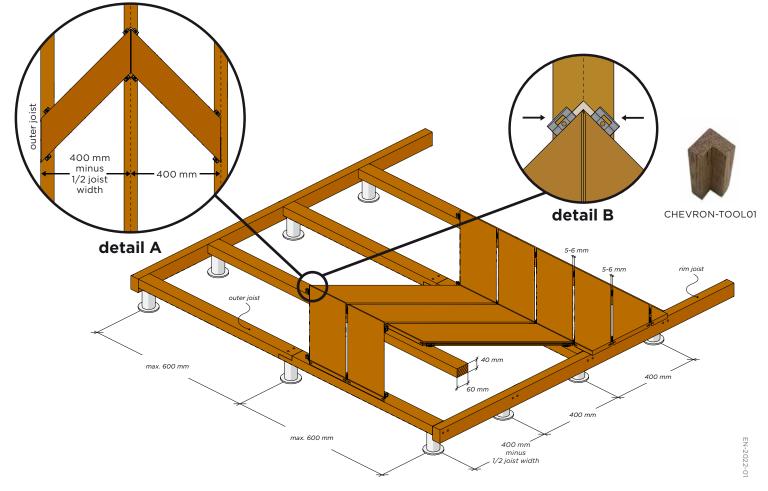

MOSO® Bamboo X-treme® Outdoor Decking Chevron installation instructions

the installation

- Keep at least 5-6 mm gap between the boards (in width direction). With MOSO® Bamboo X-treme® Fastener installation this is automatically the case. Additionally, the special Chevron installation tool (CHEVRON-TOOL01) provides further guidance for proper alignment and installation of the fasteners.
- Because of the stability of the boards, no expansion gap is needed on the ends of the boards.
- Every cut end has to be treated with board end sealer, to prevent water penetration. A sealer is available from MOSO®
- We advise to oil the decking shortly after installation but no later than after the first winter. The best moment is 3-4 months after installation when the surface is more open than immediately after installation.

installation with fasteners and chevron installation tool

- Draw a line or snap a chalk line on the centreline of each joist, with the exception of the outer joists.
- Position two boards end-to-end and align the resulting joint with the joist centreline.
- While keeping the boards in position, place the Chevron installation tool in the corner and place fasteners against each side of the Chevron installation tool (see detail B).
- Use the MOSO[®] Asymmetric Fasteners in the following sequence:
- Press fastener with hooked side in the edge groove of one board.
- Pre-drill the joist screw holes 30 mm deep. On bamboo joists: use a 3.5 mm wide drill bit 110 mm long.
- Fully tighten the screw.

Always screw vertically to the joist. Apply low torque with slow screwing speed on the screwing machine. Perform some tests for correct torque and speed adjustment before full installation.

- Install every following board by sliding it under the waved side of the fasteners.
- Use approx, 30 fasteners per m²
- For bamboo or wooden joists, only use the MOSO® stainless steel decking screws (4.5 x 30 mm).
- Check the alignment of the boards on a regular base to ensure correct placement of the chevron pattern.

cleaning and maintenance

- MOSO[®] Bamboo X-treme[®] Outdoor Decking is pre-oiled, double sided, with Woca Exterior Wood Oil (teak colour).
- Clean the floor at least one time per year with Woca Exterior Wood Cleaner and the silicon carbide broom or disk. Follow the instructions at:

www.moso-bamboo.com/youtube/x-treme Depending on climate and use it may be necessary to perform cleaning more than once per vear.

- Remove the dirt water residue on the boards
- with clean water and let the surface dry. Apply 1-2 new layers of Woca Exterior Wood Oil (teak colour). This maintenance should be undertaken 1-2 times a year to prevent the bamboo becoming grey and losing its characteristic bamboo grain. The best time to do initial oiling is 3 to 4 months after installation, or after the first winter, when the surface is more open than immediately after installation. Follow the instructions at: www.moso-bamboo.com/youtube/x-treme
- It is advisable to keep the decking free from dust and dirt as much as possible (clean by broom regularly).

storing

Store in a cool and dry place away from direct sunlight, and protected from weather influences, dirt and dust.

additional note

Whilst all due care is taken to ensure the accuracy of the installation instructions individual circumstances (location, sub floor and installation procedures) may vary and are beyond the manufacturer's control. In case of doubt, therefore, consult the distributor. Always follow the local building code.

These instructions are subject to change. For the latest version visit: www.moso-bamboo.com/x-treme/chevron

Copyright © Nothing from this text may be reproduced without the prior permission in writing from MOSO International BV.

MOSO[®] Bamboo X-treme[®] Outdoor Decking maintenance & cleaning

maintenance Woca

The surface of decking is weathered under influence of wind, rain, frost and sunshine (UV). As a result, the surface turns grey, dirty and cracks/splinters will appear. WoodCare Denmark has developed different outdoor cleaning and maintenance products. Woca Exterior Wood Cleaner loosens dirt and removes green growth from the surface, without damaging it.

maintenance of flat surface

Please be aware that on the flat surface, irregularities in the surface (e.g. cracks, splinters) may be more visible than on the grooved surface. With regular maintenance with Woca Exterior Wood Oil, this will be reduced.



Gradual greying of MOSO[®] Bamboo X-treme[®] over time:

new, non-weathered decking

cleaning

- Soak MOSO[®] Bamboo X-treme[®] with plenty of water and leave it for 10 min. If possible use a garden hose.
- Do not use high-pressure cleaners. Mix Woca Exterior Wood Cleaner with water in the ratio 1:2 and apply it. If the decking is extremely dirty, exterior cleaner may be used undiluted. Clean the decking with a silicon carbide broom or machine disk (see accessories). Scrub the soaked material lengthwise following the bamboo grain until the material appears clean. If the decking has been installed flat side up, first scrub at an angle of 45 degrees before scrubbing in the length direction. When using a machine disk this is not necessary. Repeat the cleaning if necessary. Clean the surface carefully with water.
- Leave MOSO® Bamboo X-treme® to dry for approx. 24 hours. The material must be completely dry before oil treatment can be done.



application of oil


- Apply in dry weather only. Avoid direct sunlight and high temperatures.
- Stir the oil thoroughly before use. Apply an even thin coat of oil with an applicator (see accessories) or a brush (decking with non slip grit only with a brush).
- The oil is cream-coloured when it is wet.After a few minutes, the material has an oily
- appearance as the water is evaporating.Wipe off any excess oil with clean cotton
- cloths after no more than 5-10 minutes. • Take particular care to remove excess oil
- from joints and grooves.Repeat the above process.
- When the material is dry, it may be polished with a polishing pad or polishing machine to ensure an extra hard-wearing surface. It takes 24 to 48 hours for the oil to harden thoroughly, depending on weather conditions and outdoor temperature. The material should not be exposed to water during this period.
- Pay attention to the ends of the joists and cut ends of the boards, which tend to absorb more water, and finish well to minimise water ingress. A sealer is available from MOSO.

theoretical consumption

- Mix Woca Exterior Wood Cleaner with water in the ratio 1:2 and apply it. If the decking is extremely dirty, exterior cleaner may be used undiluted.
- Woca Exterior Wood Oil: 12 15 m² / litre.

risk of self-ignition

Due to the risk of self-ignition it is important that oil-wetted cloths are soaked in water and are disposed in a tightly closed container after use. For more details, check the instructions of the finish supplier.

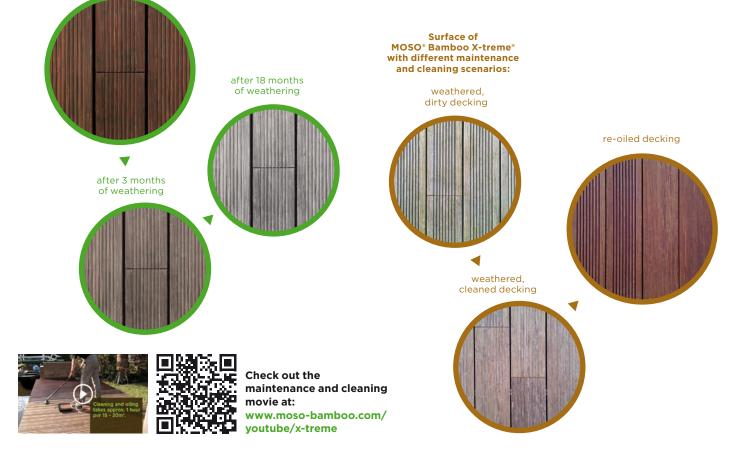

MOSO[®] Bamboo X-treme[®] user information

appearance and colour

MOSO^{*} Bamboo X-treme^{*} is a natural product, which can vary in colour, grain and appearance. Colour will change over time depending on the maintenance schedule. The boards have a brown to dark brown colour when installed, which turns into a lighter caramel colour several weeks after installation. Without further maintenance the colour gets greyish relatively fast (similar to most other wood species).

If a brown colour is preferred, maintenance should be done with Woca Exterior Wood Oil or a comparable waterbased oil/saturator with teak colour pigments.

Directly after installation, but even better after 3-4 months, 1 coat of oil (pre-oiled version) or 2 layers of oil (unfinished version) have to be applied. For further details see the installation instructions. MOSO* Bamboo X-treme* shows similarity to other hardwoods in grain and structure. The characteristic bamboo nodes however can still be recognised and provide the product with a special and lively look.

swimming pool

If MOSO® Bamboo X-treme® outdoor decking is to be used around swimming pool areas, the following has to be taken into account: MOSO® Bamboo X-treme® is a natural (wood like) product. As with any wooden product used outdoors, there is always a risk of formation of splinters, however splinters from MOSO® Bamboo X-treme® are normally smaller than (tropical) hard wood splinters. A regular application of oil (more frequently necessary around swimming pools) is required to reduce the formation of splinters. Furthermore, regular maintenance with the silicon carbide broom or disk is required to effectively remove splinters and smooth the surface. The boards must be installed in such a way that the surface water cannot flow directly into the pool.

Also bear in mind that treated swimming pool water contains salt and chlorine which can cause the boards around the pool to "weather" and become bleached faster than the boards in areas not exposed to the swimming pool water.

normal phenomena

Cracks on the surface and on the ends of the boards can occur due to the different drying characteristics of the surface and board ends. This does not affect the stability or durability of the board.

The surface side of the boards will become rougher over time and can form (small) splinters as a result of continuous water absorption and desorption due to dry and wet weather periods. Dimensional change or cupping of the boards can occur after installation. These phenomena are normal for most hardwood species and MOSO® Bamboo X-treme®.

After installation, there might be some bleeding or leaching of colour from the bamboo material when it gets wet, e.g. when it rains. This possible bleeding is typical for wood and will disappear over time. The brownish liquid can easily be cleaned from the Bamboo X-treme® material, however controlled water drainage and prevention of splash water is required to prevent any discoloration of surrounding or underlying building components.



Marine Dock Candlewood Lake (55 m²) Mount Gilead, Ohio, USA



Nordre Jarlsberg Brygge (70 m² + 1000 m¹) Selvikbukta, Norway



Lodge Puku Ridge (1300 m²) Zambia





see the ease of installation, cleaning and maintenance of **MOSO® Bamboo** X-treme® at: www.moso-bamboo.com/youtube/x-treme

Headquarters:

Moso International B.V. Adam Smithweg 2 1689 ZW Zwaag the Netherlands T +31 (0)229 265 732 info@moso.eu

Sub-Saharan Africa:

Moso Africa Pty. Ltd. 7 Glosderry Road Kenilworth 7708 Cape Town South Africa

T +27 2167 11214 contact@moso-bamboo.co.za Spain, France, Portugal, North Africa, Latin America and Middle East:

Moso Europe S.L.U. C/ Pau Claris, 83 - Principal 2ª 08010 Barcelona Spain T +34 (0)93 574 9610 contact@moso.eu

Gulf Cooperation Council (GCC) Countries:

Moso Middle East LLC 202 Al Mansour Bldg. Damascus Road, Al Qusais P.O. Box: 384421, Dubai United Arab Emirates T +971 4 258 9337 contact@moso.ae North America:

Moso North America Inc.

8400 B Remington Ave Pennsauken, NJ 08110 United States of America T +1 855 343 8444 **info@moso-bamboo.com**

Italy:

Moso Italia S.R.L Via Antonio Locatelli 86 20853 Biassono (MB) Italy

T +39 (0)39 900 5440 mosoitalia@moso.eu



bamboo products